



MK2 range

doc #

Wall Unit (User Interface)

MK2Q60

MK2A60 -- 5 button input protected unit


This unit is the same as the MK2A10 wall unit except that the input buttons are protected against "unauthorised" use.

Typical application of the MK2A60 wall unit would be in a space where normal users are not allowed to adjust the set point or fan speed, for example a lift lobby.

Access to the unit can however be acquired by pressing the buttons in sequence as set out on page 2.

Adjusting set point and/ or fan speed


Step 1

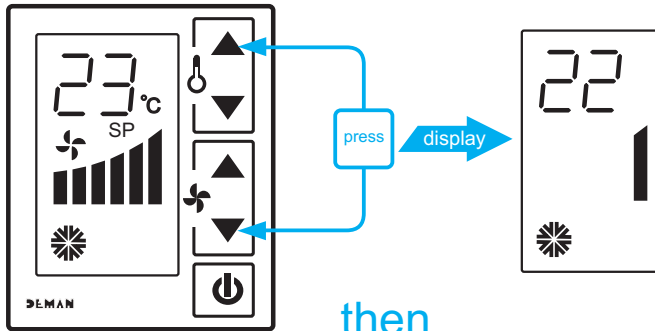

Shows temp.

then


Step 2

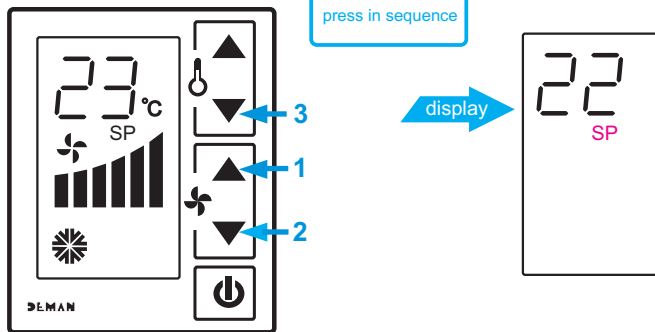

Shows current set point and "SP" flashes.


Normal temperature set point and/or fan speed adjust can now be done.

Set point adjust

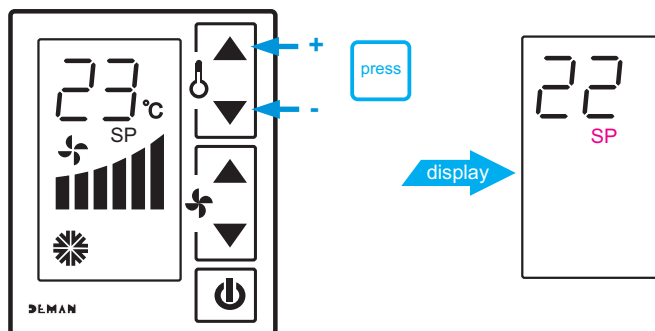

Press up or down to increase or decrease the temperature set point.


Fan speed adjust

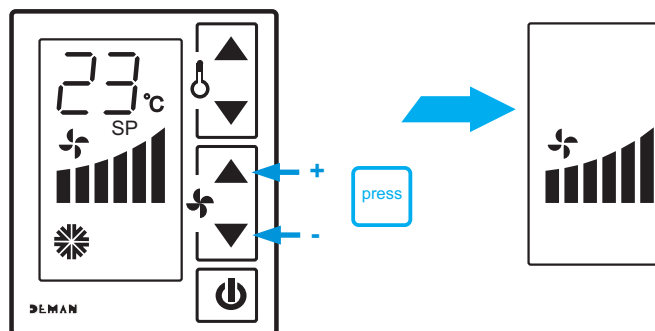

Press up or down to increase or decrease the fan speed.

The "🌀" symbol flashes.

Return to disabled keys state

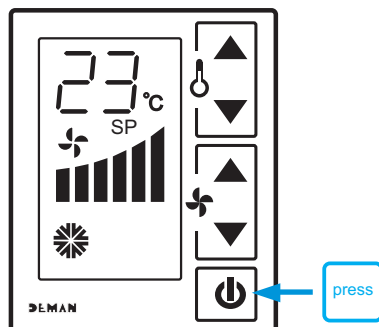

Press off to disable the keys and store the changes.

If not pressed the unit will revert to the previous settings, none of the changes will be stored and the keys will return to a disabled state within a few minutes.