



**Notes:**

- 1) No Neutral or Live looping on terminals.
- 2) 12V DC input causes the controller to switch off in an orderly manner.
- 3) Room unoccupied (open contact) -- controller in unoccupied mode. Bridge if not in use.
- 4) If the return air temperature sensor is not installed room temperature is measured at the wall unit.