



Notes:

- 1) No Neutral or Live looping on terminals.
- 2) Analog input for use by the BMS.
- 3) Room unoccupied (open contact) -- controller in unoccupied mode. Bridge if not in use.
- 4) Discharge air temp. is measured for report back on the BMS (Optional). Heating or cooling mode is supplied by the BMS.
- 5) If the return air temperature sensor is not installed room temperature is measured at the wall unit.